RISK OF ELECTRIC SHOCK. DISCONNECT POWER BEFORE SERVICING

 
1 Unpacking

1. Thoroughly inspect the fixture for freight damage. Freight damage should be reported to the delivery carrier.


2 Installation

• MOUNTING USING ¾" PLUG IN THE BACK


 Remove the four screws attaching the lens diffuser to the fixture and set the screws and lens aside.



 
 Route the incoming power and ground leads through the hole located in the center of the back of the fixture and through the opening on the side of the LED Array mounting post.



 
2. Remove the screws attaching the housing cover to the housing and set aside.



 
5. Replace the housing cover and lens diffuser. Make sure no wires are pinched when replacing parts.




 
Fixture is best mounted by drilling through back of fixture securing it to the mounting surface using the appropriate mounting hardware for the surface. Mounting hardware supplied by others. When drilling holes do not drill within 1/4" (6mm) from edges of fixture. All unused holes must be plugged. Waterproof silicone will ensure a tight seal.




    Note: Fixture can also be pendant mounted by threading the customer supplied pendant through the ¾" mounting hole on the top of the fixture.











- MOUNTING USING $\frac{1}{2}$ " PLUGS ON THE SIDE

 
 Remove the four screws attaching the lens diffuser to the fixture and set the screws and lens aside.



 
 Remove 1/2" plug from direction you intend to feed conduit.Complete the wiring to the incoming power and ground (refer to "Fixture Wiring" section).



 2. Remove the screws attaching the housing cover to the housing and set aside.



 Replace the housing cover and lens diffuser. Make sure no wires are pinched when replacing parts.



Fixture is best mounted by drilling through back of fixture securing it to the mounting surface using the appropriate mounting hardware for the surface. Mounting hardware supplied by others. When drilling holes do not drill within 1/4" (6mm) from edges of fixture. All unused holes must be plugged. Waterproof silicone will ensure a tight seal.

